



## Dendroid Brush with Best Cleaning Efficiency

Xonite® Dendroid Cleaning Brush is highly suitable for cleaning of LCD panel surface. Specially designed dendroid units wipe out contaminant from glass surface efficiently. Even it gets short due to abrasion, it delivers stable cleaning efficiency owing to its unique pattern structure.




### Improved cleaning efficiency with advanced technology


- Perfectly removes foreign matters such as glass chips and organic substance
- Cross arranged units enables cleaning process without scratch failure
- Customizable under various conditions & processes
- High durability

### Performance Test

<Abrasive Wear Test>

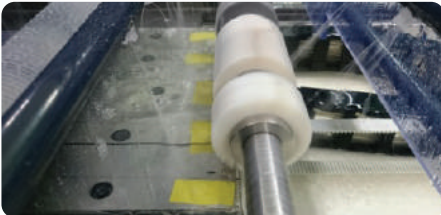


<Before Test>

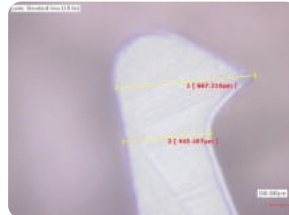

24h

<After Test>

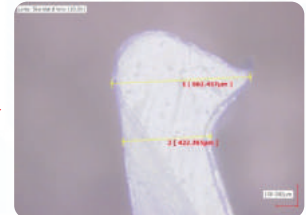

\*There is no abrasion of brush observed after 24hour edge cleaning test

Outer Diameter (mm)	Ø80 (customizable)
Inner Diameter (mm)	Ø30 (changeable)
Resin	Polymeric resin
Hardness (Shore)	D55 (±3)
Rotation Speed of Roller (rpm)	400 ~ 2000

